


MH fluid cooler

INSTALLATION - OPERATION - MAINTENANCE

uk_Z0920512_E ISSUED 04/2019

READ AND UNDERSTAND THIS MANUAL PRIOR TO OPERATING OR SERVICING THIS PRODUCT

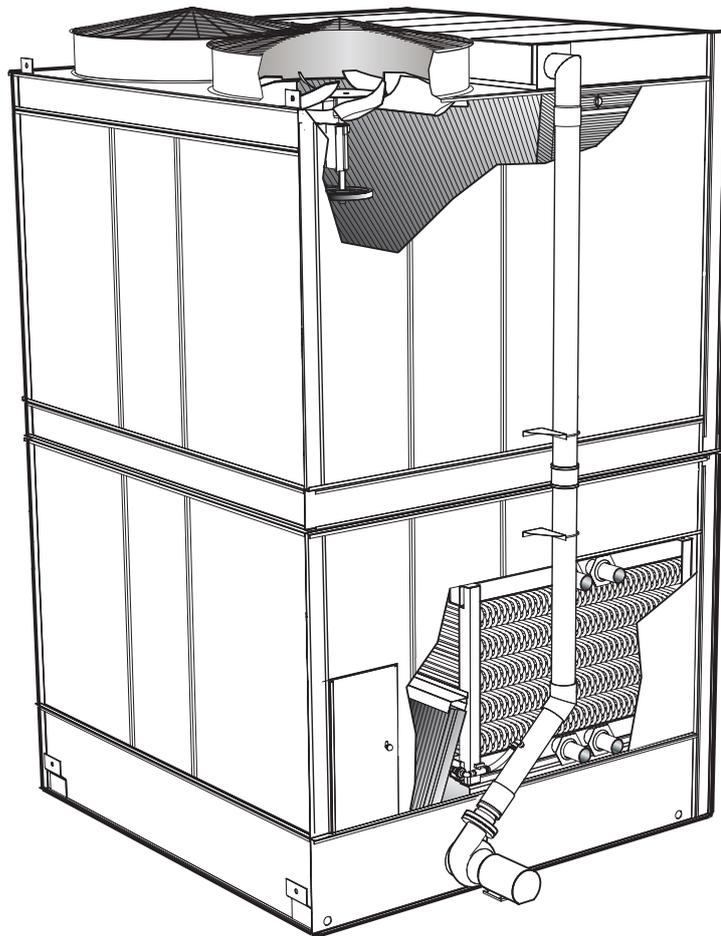

contents

Note

This manual contains vital information for the proper installation and operation of your fluid cooler. Carefully read the manual before installation or operation of the fluid cooler and follow all instructions. Save this manual for future reference.

| | |
|---|----|
| Overview | 3 |
| Fluid Cooler Location..... | 4 |
| Fluid Cooler Shipment..... | 5 |
| Receiving Fluid Cooler..... | 5 |
| Hoisting Fluid Cooler | 5 |
| Fluid Cooler Installation..... | 6 |
| Motor Wiring | 9 |
| Mechanical Equipment | 10 |
| Fluid Cooler Startup..... | 12 |
| Fluid Cooler Operation..... | 14 |
| Dry Cooling Operation..... | 16 |
| Freezing Weather Operation..... | 17 |
| Water Quality and Blowdown | 20 |
| Fluid Cooler Inspection and Maintenance | 22 |
| Belt Tensioning | 25 |
| Sheave Alignment..... | 29 |
| Routine Maintenance | 31 |
| Motor Relubrication (external motor option) | 34 |
| Seasonal Shutdown Instructions | 35 |
| Long-Term Storage Procedures..... | 36 |
| Troubleshooting..... | 40 |
| Maintenance Schedule..... | 42 |

The following defined terms are used throughout this manual to bring attention to the presence of hazards of various risk levels, or to important information concerning the life of the product.

Warning

Indicates presence of a hazard which can cause severe personal injury, death or substantial property damage if ignored.

Caution

Indicates presence of a hazard which will or can cause personal injury or property damage if ignored.

Note

Indicates special instructions on installation, operation or maintenance which are important but not related to personal injury hazards.

overview

This User Manual as well as those offered separately on motors, fans, Geareducer, couplings, drive shafts, float valves, pumps, etc., are intended to assure that this fluid cooler serves you properly for the maximum possible time. Since product warrantability may well depend upon your actions, please read this User Manual thoroughly prior to operation.

This User Manual provides information regarding general fluid cooler installation and operation. Any deviation from, change or modification to, the User Manual, the original design conditions or the original intended use of the equipment may result in improper installation and/or operation of the fluid cooler.

Any such deviation, change or modification shall be the responsibility of the party or parties making such deviation, change or modification. SPX Cooling Technologies expressly disclaims all liability for any such deviation, change or modification. The equipment shall be warranted in accordance with the applicable SPX Cooling Technologies Certification of Limited Warranty.

If you have questions about the operation and/or maintenance of this fluid cooler, and you don't find the answers in this manual, please contact your Marley sales representative. When writing for information, or when ordering parts, please include the serial number shown on the fluid cooler nameplate.

Safety First

The location and orientation of the fluid cooler can affect the safety of those responsible for installing, operating or maintaining the fluid cooler. However, since SPX Cooling Technologies does not determine the location or orientation of the fluid cooler, we cannot be responsible for addressing those safety issues that are affected by the fluid cooler's location or orientation.

Warning

The following safety issues should be considered by those responsible for designing the fluid cooler installation.

- ***Access to and from the fan deck***
- ***Access to and from maintenance access doors***
- ***The possible need for ladders (either portable or permanent) to gain access to the fan deck or maintenance access doors***
- ***The possible need for handrails around the fan deck***
- ***The possible need for external access platforms***
- ***Access issues due to obstructions surrounding the fluid cooler***
- ***Lockout of mechanical equipment***
- ***The possible need for safety cages around ladders***
- ***The need to avoid exposing maintenance personnel to the potentially unsafe environment inside the fluid cooler***



overview

Note

It is not intended nor assumed that access to the fan deck on single-flow models—Models MHF7101 thru MHF7109—is needed or necessary.

Those are only some of the safety issues that may arise in the design process. SPX strongly recommends that you consult a safety engineer to be sure that all safety considerations have been addressed.

Several options are available that may assist you in addressing some of these personnel safety concerns, including:

- Louver face distribution basin access platform with ladder and handrail.
- A handrail system around the perimeter of the fan deck with either one or two ladders for access to the deck. Doubleflow models MHF7111 and MHF7113 only.
- Extended fan deck that provides additional access around one end of the fan cylinder opposite the fan deck access ladder. Doubleflow models MHF7111 and MHF7113 only.
- Ladder extensions—used where the base of the fluid cooler is elevated.
- Safety cages for ladders.
- External lube lines.
- Access door platform.
- Motor located outside the fluid cooler. Doubleflow models MHF7111 and MHF7113 with Geareducer drive only.
- External motor access platform. Doubleflow models MHF7111 and MHF7113 with Geareducer drive only.
- Plenum walkway.
- Mechanical equipment access platform.

Fluid Cooler Location

Space available around the fluid cooler should be as generous as possible to promote ease of maintenance—and to permit freedom of airflow into and through the fluid cooler. If you have questions about the adequacy of the available space and the intended configuration of the fluid cooler, please contact your Marley sales representative for guidance.

Prepare a stable, level support foundation for the fluid cooler, utilizing weight, wind load, and dimensional information appearing on appropriate Marley submittal drawings. Supports must be level to insure proper operation of the fluid cooler.

installation

Warning

The fluid cooler must be located at such distance and direction to avoid the possibility of contaminated fluid cooler discharge air being drawn into building fresh air intake ducts. The purchaser should obtain the services of a Licensed Professional Engineer or Registered Architect to certify that the location of the fluid cooler is in compliance with applicable air pollution, fire and clean air codes.

Fluid Cooler Shipment

Unless otherwise specified, the MH Fluid Cooler ships by truck (on flat bed trailers), which lets you receive, hoist, and install the fluid cooler in one continuous operation. Single-cell single-flow fluid coolers ship on one truck. Doubleflow and multicell fluid coolers, depending on their size, may require more than one truck.

Responsibility for the condition of the fluid cooler upon its arrival belongs to the trucker—as does the coordination of multiple shipments, if required.

Receiving Fluid Cooler

Prior to unloading the fluid cooler from the delivering carrier, inspect the shipment for evidence of damage in transit. If damage is apparent, note the freight bill accordingly. This will support your future recovery claim.

Find and remove the installation instruction drawings and bills of material located in a plastic bag in the water collection basin. This information should be kept for future reference and maintenance purposes.

Hoisting Fluid Cooler

All MH Fluid Cooler models must use hoist clips and overhead lifting for handling assembled fluid cooler. **Fork lifting from base of fluid cooler is not permitted.** The clips for the top modules are located at the fan deck level. The clips for the lower modules are located at the bottom of the modules at the water collection basin. A **Hoisting-Installation** label which has hoisting dimensional information is located on the side casing near the fluid cooler centerline. Remove fluid cooler from the carrier and hoist into place according to the instructions on the label.

Caution


Upper and lower modules must be hoisted and set separately. Do not preassemble modules prior to hoisting.



installation

Warning

Hoisting clips are provided for ease of unloading and positioning the fluid cooler. For overhead lifts or where additional safety is required, safety slings should also be placed under the fluid cooler modules. Under no circumstances should you combine the top and bottom modules of modular models and attempt to hoist them at the same time by utilizing the hoisting clips alone!

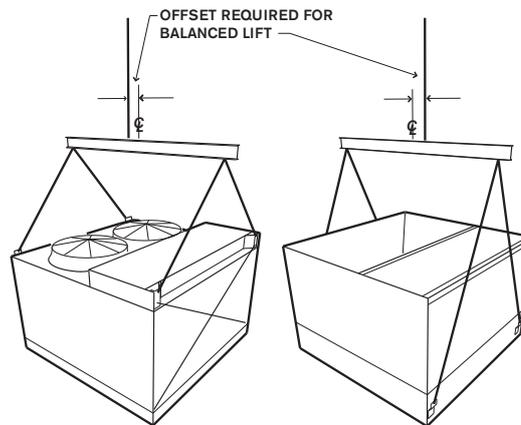

SINGLE FLOW FLUID COOLER SHOWN

Fluid Cooler Installation

Note

These installation instructions are intended to help you prepare before your fluid cooler arrives. If discrepancies exist between these instructions and those shipped with the fluid cooler, the instructions shipped with the fluid cooler will govern.

1. Prior to placement of the fluid cooler, confirm that the supporting platform is level, and that the anchor bolt holes are correctly located in accordance with Marley drawings. If your installation uses vibration isolators to dampen vibration, they must be mounted below the supporting steel. See support drawings for further information.
2. Place bottom module on your prepared supports, aligning anchor bolt holes with those in your supporting steel. Make sure that the orientation agrees with your intended piping arrangement. Attach fluid cooler to supporting steel with M16 bolts and flat washers (by others). See support drawing for location and quantity. Position flat washers between the bolt head and the fluid cooler basin flange.

installation

3. Before setting top module in place on bottom module, clean any debris from the underside of the top module fill, skid and beams and from the top of the bottom module and remove shipping cover from bottom of top module—replace fasteners at side of module to prevent leaks. Place top module on the top peripheral bearing surface (factory-installed gasket) of bottom module, aligning mating holes as it is set in place. Attach top module to bottom module with fasteners provided according to drawings shipped with your fluid cooler.
4. Connect the recirculation piping with rubber coupling shipped with the bottom module piping according to drawings shipped with you fluid cooler.
5. Attach makeup water supply piping to appropriately-sized float valve connection located in collection water basin side wall. Install the drain and overflow according to drawings shipped with your fluid cooler. If you wish to pipe overflow and drain water to a remote discharge point, make those connections at this time also.

Note

Fasteners and components provided by others that are to be attached to the fluid cooler must be compatible with the fluid cooler materials—i.e. fasteners in a stainless steel cold water basin must be stainless steel.

6. Attach the process fluid supply and return piping to the coil. The coil connection type was defined based on customer preference before the tower was ordered. The most common connection types are described are as follows.

Caution

Except for the horizontal components of piping, do not support your piping from the fluid cooler inlet / outlet connections – support it externally. Normally, one of the following inlet arrangements is provided:

Bevel and groove connection: The coil piping connections are beveled for welding and grooved for a mechanical coupling. If weld connections are used, it is recommended that weld areas be protected against corrosion. Cold galvanizing is suggested for galvanized coils, applied according to the manufacturer's instructions.

Caution

For welded or soldered connections protect adjacent areas from excessive heat and sparks or damage may occur.



installation

Threaded connection: The coil piping connections are fitted with male threads of a specified thread type – most commonly NPT or BSP, depending on location of installation.

Copper Soldered connection: The piping connections are pipe stubs for field soldering.

Flanged connection: The coil piping connections are designed for flat-face flange fittings conforming to 125# ANSI B16.1 specifications and are field installed (by others). Flange fittings are grooved connection for steel coils and solder connection for copper coils. Full faced gaskets and appropriately sized bolts (by others) must be used for proper function.

7. Wire motor(s) and recirculation pump(s) in accordance with wiring diagram.

Warning

For maintenance/safety purposes, SPX recommends a lockout type disconnect switch for all mechanical equipment. In addition to a disconnect switch, the motor should be wired to main power supply through short circuit protection, and a magnetic starter with overload protection.

Motor Wiring

Wire motor leads as shown on the motor nameplate matching the supply voltage. Do not deviate from the motor nameplate wiring.

Internal space heaters may be present, depending upon the motor manufacturer. For space heater operation and wiring refer to the Marley “**Fan Motor**” User Manual Z0239042.

Either of following symbols may be shown on the motor nameplate – Δ , $\Delta \Delta$, Y, or YY. These symbols represent how the motor is constructed on the inside and in no way have anything to do with a Delta or Wye electrical distribution system serving the motor.

When using a starter:

- Set motor overload protection to 110% of motor nameplate amps. This setting allows the fan motor to operate during cooler weather. During cooler weather it is common for the motor to draw 6 to 10% higher than nameplate amps. High amps are common during fluid cooler commissioning when the fluid cooler is dry and the ambient air temperature is cool.

Note

Do not start the motor more than four to five times per hour. Short cycling the fluid cooler will cause fuses, breakers or OLS to operate and will decrease motor life.

installation

When using a two-speed starter:

- Motor rotation must be the same at slow speed and high speed.
- Single winding motor requires a starter with a shorting contactor.
- Two-winding motor requires a starter with out a shorting contactor.
- All two-speed starters must have a 20 second time delay relay when switching from high speed to low speed.

Note

Do not start the motor more than four to five times per hour (each low speed start and each high speed start count as one start).

When using a VFD:

Note

Before beginning, ensure that the motor is rated for “Inverter Duty” per NEMA MG-1, part 31.

- Set the VFD solid state overload protection to 119% of motor nameplate amps and set “maximum current parameter” in the VFD to motor nameplate amps. “Maximum current parameter” will reduce fan speed and limit amp draw to nameplate amps during cold weather operation. If furnished with a mechanical OL set this at 110% over motor nameplate amps.
- Motor rotation must be the same in both VFD mode and bypass mode.
- If cable distance between the VFD and motor is greater than 30m a DV/DT output filter is recommended to avoid damage to the motor. 100 feet distance is based on our field experience, the VFD manufacture may state different distances and distance does vary depending on the VFD manufacturer.
- Program the VFD for variable torque output. Flux vector and constant torque modes may damage the gearbox.
- Do not start and stop the motor using the safety switch at the motor. If the drive is being commanded to run and the load side is cycled ON and OFF with the safety switch this may damage the VFD.

Using a VFD in cooling applications has advantages over traditional single or two speed motor control. A VFD can reduce the cost of electrical energy being used and provide better temperature control. In addition, it reduces the mechanical and electrical stress on the motor and mechanical equipment. Electrical savings can be large during periods of low ambient temperature when the cooling requirement can be satisfied at reduced speeds. To benefit from these advantages, it is important that the drive be installed correctly.

Marley VFD and controls are specifically designed for our cooling products. If you have purchased a Marley VFD and/or controls package, please follow the instructions in the User Manual for that system. Most VFD problems can be



installation

avoided by purchasing Marley drive systems. If you are installing a VFD other than a Marley drive, please refer to that drives installation manual.

Warning

Improper use of a VFD may cause damage to equipment or personal injury. Failure to correctly install the VFD drive will automatically void all warranties associated with the motor and any equipment that is either electrically or mechanically (directly) attached to the VFD drive system. The length of this warranty avoidance will be contingent on properly installing the VFD system and repairing any damage that may have occurred during its operation. SPX Cooling Technologies does not assume responsibility for any technical support or damages for problems associated with non-Marley brand VFD systems.

Warning

Changing the operational fan speed from the factory settings could cause the fan to operate in an unstable region which may result in damage to the equipment and possible injury.

Mechanical Equipment

Caution

The fluid cooler is designed to operate at full speed and half speed. Warranty is void if the fluid cooler is operated at speeds which cause damaging vibrations to the fluid cooler and associated equipment. When utilizing a variable frequency drive, the fluid cooler must be tested across the full range of speeds and checked against CTI guidelines for excessive vibration. Speed ranges not meeting these guidelines must be locked out in the VFD.

Warning

Always shut off electrical power to the fluid cooler fan motor prior to performing any maintenance on the fluid cooler. Any electrical switches should be locked out and tagged out to prevent others from turning the power back on.

1. If equipped, check oil level . Although the Geareducer was filled to the proper level at the factory, tipping during shipment and hoisting may have caused some loss of oil. If oil is required, fill Geareducer to the proper level with approved lubricant. See **Geareducer User Manual**. Check oil level at the Geareducer or dipstick (standpipe located on fan deck, if so equipped) to confirm that the proper level is indicated.
2. On doubleflow models—MHF7111 and MHF7113—install the two-piece fan guard according to the installation drawing shipped with the fluid cooler.

installation

Warning

Improper installation of the fan cylinder and fan guard will destroy the structural integrity of the fan guard. Failure of the fan guard could allow operating or maintenance personnel to fall into the rotating fan.

3. Spin the fan(s) manually to assure that all fan blades properly clear the inside of the fan cylinder. If equipped, observe the action of the coupling (or drive shaft couplings) to be sure that the motor and Geareducer are properly aligned. If necessary, correct the alignment in accordance with the included manual. For belt drive equipped models observe the action of the sheaves and belts to be sure that the motor is properly aligned with the fan sheave. See Belt Tensioning and Sheave Alignment on pages 25 and 30.

Note

It is essential that the fan cylinder and fan guard be installed in accordance with the drawings shipped with the fluid cooler. Do not force the fan cylinder out of round.

4. Momentarily bump (energize) the motor(s) and observe rotation of the fan(s). If rotation is backwards, shut off the fan and reverse two of the three primary leads supplying power to the motor.

Caution

If fluid cooler is equipped with a two-speed motor, check for proper rotation at both speeds. Check also to see that starter is equipped with a 20 second time delay which prevents direct switching from high speed to low speed. If the fan is intended to be reversed for deicing purposes, make sure that the starter is equipped with a 2 minute time delay between changes of direction. These delays will prevent abnormal stress from being applied to the mechanical equipment and the electrical circuit components.

5. Run the motor and observe the operation of the mechanical equipment. Operation should be stable, and, if equipped, there should be no evidence of oil leakage from the Geareducer.
6. If equipped with belt drive, check the torque on the fan and motor sheave after 10 - 60 hours of operation. See Bushing Fastener Torque Values on pages 25 and 30.

Note

If the water supply system is not being operated—or if there is no heat load on the system—motor amps read at this time may indicate an apparent overload of as much as 10–20%. This is because of the increased density of unheated air flowing through the fan. Determination of an accurate motor load should await the application of the design heat load.

operation

⚠ Warning

Fluid Cooler Startup

Microorganisms including Legionella bacteria can exist in premise plumbing including fluid coolers. The development of an effective water management plan (WMP) and implementation of maintenance procedures are essential to prevent the presence, dissemination and amplification of Legionella bacteria and other waterborne contaminants throughout premise plumbing. Before operating the fluid cooler, the water management plan and maintenance procedures must be in place and regularly practiced.

Water System:

1. Consult a knowledgeable water treatment professional to clean and treat your new fluid cooler prior to startup. Fluid coolers must be cleaned and disinfected regularly in accordance with local public health services and recommendations.

The water conditions during initial fluid cooler operation are crucial in preventing premature corrosion of galvanized steel (white rust). For at least the first eight weeks of operation, pH should be controlled between 6.5 and 8.0 with hardness and alkalinity levels between 100 and 300 mg/l (expressed as CaCO₃).

2. Do NOT attempt any service unless the fan motor is locked out.
3. Remove any and all accumulated debris from fluid cooler. Pay particular attention to inside areas of collection water basin, distribution water basins, louvers and drift eliminators. Make sure that cold water suction screens are clear and properly installed.
4. Fill the water system to an approximate depth of 8" in the depressed area of the collection water basin. This is the recommended operating water level. Adjust the float valve so that it is 75% open at that level. Continue filling the system until the water reaches a level approximately 3mm below the lip of the overflow.



operation

5. Start your pump(s) and check for proper rotation as indicated by the arrow on the pump cover, observe system operation. A certain amount of “pump-down” of the basin water level will occur before water completes the circuit and begins to fall from the fill in the upper module. The amount of initial pump-down may be insufficient to cause the float valve to open. However, you can check its operation by pressing down on the operating lever to which the stem of the float valve is attached.

Some trial and error adjustment of the float valve may be required to balance the makeup water with fluid cooler operation. Ideally, the float valve setting will be such that no water is wasted through the overflow at pump shutdown. However, the water level after pump start-up **must** be deep enough to assure positive pump suction.

6. Open the valve on the fluid cooler bleed line and adjust bleed to the recommended rate. See **Water Quality and Blowdown** section.
7. Continue pump operation for about 15 minutes, after which it is recommended that the water system be drained, flushed and refilled.
8. While operating the recirculating water pump(s) and prior to operating the fluid cooler fan, execute one of the two alternative biocidal treatment programs described in the following:
 - Resume treatment with the biocide which had been used prior to shutdown. Utilize the services of the water treatment supplier. Maintain the maximum recommended biocide residual (for the specific biocide) for a sufficient period of time (residual and time will vary with the biocide) to bring the system under good biological control **or**
 - Treat the system with sodium hypochlorite to a level of 4 to 5 mg/l free chlorine residual at a pH of 7.0 to 7.6. The chlorine residual must be held at 4 to 5 mg/l for six hours, measurable with standard commercial water test kits.

If the fluid cooler has been in operation and then shut down for a duration of time and not drained, perform one of the two previous biocidal treatment programs directly to the fluid cooler storage vessel (collection basin, drain down tank, etc.) without circulating stagnant water over the fluid cooler fill or operating the fluid cooler fan.

After biocidal pretreatment has been successfully completed, cooling water may be circulated over the fluid cooler fill with the fan off.

When biocidal treatment has been maintained at a satisfactory level for at least six hours, the fan may be turned on and the system returned to service. Resume the standard water treatment program, including biocidal treatment.

operation

Fluid Cooler Operation

General:

The cold process fluid temperature obtained from an operating fluid cooler will vary with the following influences:

1. **Heat load** With the fan in full operation, if the heat load increases, the cold process fluid temperature will rise. If the heat load reduces, the cold process fluid temperature will reduce.

Note that the number of degrees (“range”) through which the fluid cooler cools the process fluid is established by the system heat load and the amount of fluid being circulated, in accordance with the following formula—formula is only valid for 100% water as process fluid:

$$\text{Range} - ^\circ\text{C} = \frac{\text{Heat Load (kW)}}{\text{Water Flow (m}^3\text{/hr)} \times 1.162}$$

The fluid cooler establishes only the cold process fluid temperature attainable under any operating circumstance.

2. **Air wet-bulb temperature** Cold process fluid temperature will also vary with the wet-bulb temperature of the air entering the louvered faces of the fluid cooler. Reduced wet-bulb temperatures will result in colder process fluid temperatures. However, the cold process fluid temperature will not vary linearly with the wet-bulb. For example, a 1 °C reduction in wet-bulb may result in only a 8 °C reduction in cold process fluid temperature.
3. **Fluid flow rate** Increasing the process fluid flow rate (m³/hr) will cause a slight elevation in cold process fluid temperature, while reducing the fluid flow rate will cause the cold process fluid temperature to decrease slightly. However, at a given heat load (see formula above), process fluid flow reductions also cause an increase in the incoming hot process fluid temperature and thermal range.
4. **Air flow rate** Reducing air flow through the fluid cooler causes the cold process fluid temperature to rise. This is the recommended method by which to control leaving process fluid temperature.

If your fluid cooler is equipped with a single-speed motor, the motor may be shut off when the process fluid temperature becomes too cold. This will cause the process fluid temperature to rise. When the fluid temperature then becomes too warm for your process, the motor can be restarted.

operation

Fan cycling limits:

Note

Considering the normal fan and motor sizes utilized on MH Fluid Coolers, anticipate that approximately 4 to 5 starts per hour are allowable.

If your fluid cooler is equipped with a two-speed motor(s), you will have an opportunity for process temperature control. When the process fluid temperature becomes too cold, switching the fan to half-speed will cause the cold process fluid temperature to rise—stabilizing at a temperature a few degrees higher than before. With a further reduction in fluid temperature, the fan may be cycled alternately from half-speed to off.

Note

Do not start the motor more than four to five times per hour (each low speed start and each high speed start count as one start).

For greater insight on process fluid temperature control, please read *Marley Technical Report H-001 “Cooling Tower Energy Management”*, available at spxcooling.com.

Pump cycling limits Cycling the recirculating water pump(s) to control process fluid temperature is not typically recommended. It is recommended that while process fluid is being circulated through the coil the fluid cooler recirculation water system always be in operation. If the recirculating water pumps(s) are cycled as part of normal system operation, care must be exercised – frequent wet/dry cycles may lead to premature scaling of the coil surface.

Dampers If equipped, the positive closure damper system is designed to help prevent heat loss from the coil due to air movement caused by convection or wind conditions when both the fan and pump are off.

Upon start-up of the fluid cooler fans, the damper actuator is energized and rotates the damper assembly blades open. The actuator should be wired into the control circuitry of the fan motor. Upon system shutdown the damper actuator is de-energized and the spring return actuator returns the damper blades to the closed position.



operation

Note

If the dampers are equipped with an automatic electric actuator, the actuator electric motor controller will include a 200-volt AC space heater in accordance with the SPX Cooling specification. The space heater is to be energized at all times whether actuator motor is operating or not. The purpose of the energized space heater is to prevent moisture inside the unit from corroding the internal components. Failure to wire and energize the space heater will void the warranty if the actuator fails due to internal corrosion.

Automatic Electric Actuator must be stored in a dry environment until installed. If a unit is going to sit idle prior to startup, the actuator must be removed from the damper and stored appropriately.

Dry Operation

Note

Also refer to the Freezing Weather Operation and Protection Against Coil Freezing sections.

Models equipped with a finned coil(s) are designed to operate dry without recirculating water during colder weather as heat load and ambient conditions permit.

If dry operation is intended and the recirculating water is at risk of freezing, the recirculating pump should be turned off, and the water in the collection basin, pump and make-up supply piping should be drained.

Care must be exercised when cycling the recirculating water pump(s)—frequent wet/dry cycles may lead to premature scaling of the coil surface.

operation

Freezing Weather Operation

The Marley film-fill system used in the MH Fluid Cooler has air entrance louvers that are molded as an integral part of the fill. This feature makes these fluid coolers very forgiving of cold weather operation, even at the low temperature and reduced load conditions encountered in low temperature applications. Nevertheless, during operation in subfreezing weather, the opportunity exists for ice to form in the colder regions of the fluid cooler.

Note

Slushy, transitory ice forms routinely in the colder regions of the fill of low temperature fluid coolers, and is visible through the fluid cooler louvers. Such ice normally has no adverse effect on fluid cooler operation, but its appearance should be a signal to the operator to undertake ice control procedures.

It is the operator's responsibility to prevent the formation of destructive (hard) ice on the fluid cooler fill. Certain guidelines should be followed:

1. Do not allow the fluid cooler's leaving process fluid temperature to drop below 7°C. If such low temperature operation is necessary or beneficial to your process, establish the minimum allowable level as follows:

During the coldest days of the first winter of operation, observe whether any ice is forming on the louver face, particularly near the bottom part of the louver face. If hard ice is present on the louvers, you must increase the allowable cold water temperature.

Caution

If the minimum allowable cold process fluid temperature is established at or near minimum heat load, it should be safe for all operating conditions.

Having established the minimum allowable cold water temperature, maintaining that temperature can be accomplished by fan manipulation, as outlined in **Item 4** under **Fluid Cooler Operation**.

2. As cold air enters the louvers, it causes the water flowing over the fill to be drawn inward toward the center of the fluid cooler. Thus, under fan operation, the louvers and lower periphery of the fluid cooler structure remain partly dry, seeing only random splashing from within the fluid cooler—plus normal atmospheric moisture from the entering air. Such lightly wetted areas are most subject to freezing.



operation

Therefore, if excessive ice forms on the louvers, stop the fan for a few minutes. With the fan off, the water flow will increase in the vicinity of the louvers and reduce the ice buildup.

3. Under extended extreme cold conditions, it may be necessary to operate the fan in reverse. This forces warm air out through the louvers, melting any accumulated ice—adequate heat load must be available. Reversal of fan should only be done at **half speed** or less. Reverse operation of the fan should be used sparingly and should only be used to control ice, **not** to prevent it. Reverse fan operation should not need to exceed 1 or 2 minutes. Monitoring is required to determine the time required to melt accumulated ice.

Warning

Operating the fan in reverse at half speed for prolonged periods during subfreezing weather can cause severe damage to fans and fan cylinders. Ice can accumulate inside fan cylinders at fan blade plane of rotation and fan blade tips will eventually strike this ring of ice, damaging the fan blades or cylinder. Ice can also accumulate on fan blades and be thrown off, damaging fan cylinder or blades. Allow a minimum of 10 minute delay between reverse operation and forward operation during subfreezing weather to permit ice to dissipate from fan blades and fan cylinders. See Fan Drive Caution note on page 9 for fan speed change and reversing precautions.

Intermittent Freezing Weather Operation:

If periods of shutdown (nights, weekends, etc.) occur during freezing weather, measures must be taken to prevent the water in the cold water basin—and all exposed pipework—from freezing. Several methods are used to combat this, including automatic basin heater systems and pump freeze protection systems available from Marley.

Warning

Basin heaters systems will not prevent the coil from freezing.

Caution

Unless some means of freeze prevention is incorporated into your system, the fluid cooler basin and exposed pipework should be drained at the beginning of each wintertime shutdown period.

Warning

If fluid cooler basin is drained, verify that all basin heaters have been shut off either by automatic cutoff or disconnect switch.

operation

Protection Against Coil Freezing:

Ethylene and propylene glycol solutions are the best means to protect the coil from freezing. The following table provides the coil volume for each MH Fluid Cooler model. MHF7111 and MHF7113 coil volumes are for both coils added together.

Steel Coil:

| Model | Coil Volume m ³ | Model | Coil Volume m ³ | Model | Coil Volume m ³ |
|-------------|-------------------------------|-------------|-------------------------------|-------------|-------------------------------|
| MHF7101__HN | 0.198 | MHF7105__CN | 0.867 | MHF7109__CN | 2.37 |
| MHF7101__AN | 0.276 | MHF7105__AF | 0.693 | MHF7111__AN | 2.32 |
| MHF7101__JN | 0.315 | MHF7105__BF | 0.939 | MHF7111__JN | 2.89 |
| MHF7101__BN | 0.397 | MHF7105__CF | 1.06 | MHF7111__BN | 3.35 |
| MHF7101__DN | 0.276 | MHF7107__HN | 0.738 | MHF7111__CN | 3.32 |
| MHF7101__EN | 0.397 | MHF7107__AN | 0.954 | MHF7111__AF | 2.82 |
| MHF7103__HN | 0.293 | MHF7107__JN | 1.20 | MHF7111__BF | 3.85 |
| MHF7103__AN | 0.375 | MHF7107__BN | 1.43 | MHF7111__CF | 3.82 |
| MHF7103__JN | 0.474 | MHF7107__CN | 1.65 | MHF7113__AN | 2.79 |
| MHF7103__BN | 0.557 | MHF7107__AF | 1.21 | MHF7113__JN | 3.48 |
| MHF7103__AF | 0.519 | MHF7107__BF | 1.68 | MHF7113__BN | 4.05 |
| MHF7103__BF | 0.701 | MHF7107__CF | 1.90 | MHF7113__CN | 4.02 |
| MHF7105__HN | 0.388 | MHF7109__HN | 1.10 | MHF7113__AF | 3.33 |
| MHF7105__AN | 0.500 | MHF7109__AN | 1.43 | MHF7113__BF | 4.59 |
| MHF7105__JN | 0.632 | MHF7109__JN | 1.81 | MHF7113__CF | 4.56 |
| MHF7105__BN | 0.746 | MHF7109__BN | 2.15 | | |

Copper Coil:

| Model | Coil Volume m ³ | Model | Coil Volume m ³ | Model | Coil Volume m ³ |
|--------------|-------------------------------|--------------|-------------------------------|--------------|-------------------------------|
| MHF7101__ANC | 0.174 | MHF7103__ANC | 0.265 | MHF7105__CNC | 0.507 |
| MHF7101__BNC | 0.247 | MHF7103__BNC | 0.378 | MHF7107__ANC | 0.651 |
| MHF7101__DNC | 0.174 | MHF7105__ANC | 0.348 | MHF7107__BNC | 0.954 |
| MHF7101__ENC | 0.247 | MHF7105__BNC | 0.507 | MHF7107__CNC | 0.954 |

When the use of industrial antifreeze solutions is not possible, the system must be operated to meet both of the following conditions.

1. Maintain sufficient flow rate through the coil.
2. Maintain sufficient heat load on the process fluid. Fluid exiting the coil must be maintained at or above 7°C. Cycling of the recirculation pump should not be used to control process temperatures.



maintenance

Caution

Draining the coil is not acceptable as a normal method of freeze protection—draining promotes corrosion inside the coil tubes. Draining is acceptable in an emergency if the coil is not protected by an antifreeze solution.

It is recommended that you discuss your freeze prevention options with your local Marley sales representative.

Water Quality and Blowdown

Maintaining Water Quality:

The steel used in MH Fluid Coolers has been galvanized with a heavy zinc coating averaging 0.05mm in thickness. Other materials used (PVC fill, drift eliminators, and louvers, aluminum fans, cast iron Geareducer, etc.) are selected to offer maximum service life in a “normal” fluid cooler environment, defined as follows:

Recirculating water with a pH between 6.5 and 8; a chloride content (as NaCl) below 500 mg/l; a sulfate content (SO_4) below 250 mg/l; total alkalinity (as CaCO_3) below 500 mg/l; calcium hardness (as CaCO_3) above 50 mg/l; no significant contamination with unusual chemicals or foreign substances; and adequate water treatment to minimize scaling.

- Startup Conditions: The water conditions during initial fluid cooler operation are crucial in preventing premature corrosion of galvanized steel (white rust). For at least the first eight weeks of operation, pH should be controlled between 6.5 and 8.0 with hardness and alkalinity levels between 100 and 300 mg/l (expressed as CaCO_3).
- Chlorine (if used) shall be added intermittently, with a free residual not to exceed 1 mg/l—maintained for short periods. Excessive chlorine levels may deteriorate sealants and other materials of construction.
- An atmosphere surrounding the fluid cooler no worse than “moderate industrial”, where rainfall and fog are no more than slightly acid, and they do not contain significant chlorides or hydrogen sulfide (H_2S).
- Many proprietary chemicals exist for control of scale, corrosion, and biological growth and should be used prudently. Also, combinations of chemicals may cause reactions which reduce treatment effectiveness, and certain chemicals such as surfactants, biodispersants and antifoams may increase drift rate.

maintenance

Note

The structure and coil of your fluid cooler consists primarily of galvanized steel, therefore your water treatment program must be compatible with zinc. In working with your water treatment supplier, it is important that you recognize the potential effects on zinc of the specific treatment program you choose.

Blowdown:

A fluid cooler cools water by continuously causing a portion of it to evaporate. Although the water lost by evaporation is replenished by the makeup system, it exits the fluid cooler as pure water—leaving behind its burden of dissolved solids to concentrate in the remaining water. Given no means of control, this increasing concentration of contaminants can reach a very high level.

In order to achieve water quality which is acceptable to the fluid cooler, the selected water treatment company must work from a relatively constant level of concentrations. This stabilization of contaminant concentrations is usually accomplished by blowdown, which is the constant discharge of a portion of the circulating water to waste. As a rule, acceptable levels on which to base a treatment schedule will be in the range of 2-4 concentrations. The following table shows the minimum amount of blowdown (percent of flow) required to maintain different concentrations with various cooling ranges*:

| Cooling Range | Number of Concentrations | | | | | | |
|---------------|--------------------------|------|------|------|------|------|------|
| | 1.5X | 2.0X | 2.5X | 3.0X | 4.0X | 5.0X | 6.0X |
| 3°C | .7 | .38 | .25 | .18 | .11 | .08 | .06 |
| 6°C | 1.5 | .78 | .51 | .38 | .25 | .18 | .14 |
| 8°C | 2.3 | 1.18 | .78 | .58 | .38 | .28 | .22 |
| 11°C | 3.1 | 1.58 | 1.05 | .78 | .51 | .38 | .30 |
| 14°C | 3.9 | 1.98 | 1.32 | .98 | .64 | .48 | .38 |

Multipliers are based on drift of 0.02% of the circulating water rate.

* Range = Difference between hot water temperature and cold water temperature.

EXAMPLE: 160 m³/hr circulating rate, 10°C cooling range. To maintain 4 concentrations, the required blowdown is 0.458% or .00458 times 160 m³/hr, which is .73 m³/hr.

If fluid cooler is operated at 4 concentrations, circulating water will contain four times as much dissolved solid as the makeup water, assuming none of the solids form scale or are otherwise removed from the system.



maintenance

Note

When water treatment chemicals are added, they should not be introduced into the circulating water system via the water collection basin of the fluid cooler. Water velocities are lowest at that point, which results in inadequate mixing. Ideal locations would be in the redistribution basin above the coil, or in the riser pipe above the discharge of the recirculating water pump(s).

Fluid Cooler Inspection and Maintenance

Warning

Microorganisms including Legionella bacteria can exist in premise plumbing including fluid coolers. The development of an effective water management plan (WMP) and implementation of maintenance procedures are essential to prevent the presence, dissemination and amplification of Legionella bacteria and other waterborne contaminants throughout premise plumbing. Before operating the fluid cooler, the water management plan and maintenance procedures must be in place and regularly practiced.

In addition, the following steps are recommended:

Do NOT attempt any service unless the fan motor is locked out.

- Consult a knowledgeable water treatment professional to clean and treat your cooling tower. See **Fluid Cooler Startup** section of this manual.
- Fluid coolers must be cleaned and disinfected regularly in accordance with local public health services and recommendations.
- Workers performing decontamination procedures must wear personal protective equipment (PPE) as directed by their facility safety officer.
- Fluid coolers must be visually inspected regularly to assess signs of bacterial growth, appearance of debris and scale on drift eliminators and general operating conditions.
- Replace worn or damaged components.

To minimize the presence of waterborne microorganisms, including Legionella, follow the water management plan for your facility, perform regularly scheduled fluid cooler inspections and maintenance, and enlist the services of water treatment professionals.

For additional technical support, contact your Marley sales representative.

maintenance



Coil Louver Removal:

The coil inlet louvers are comprised of a series of thermoformed PVC pack assemblies, oriented to push water back into the fluid cooler. They are packed tightly to ensure no water escapes from the air inlet.

⚠ Caution

Louver edges can be very sharp and could cut skin if proper protection is not used. Always wear gloves and sleeves when handling eliminator packs.

To remove the louvers, place both hands on the louver face and push up, this will indicate where one assembly stops and another starts. Push a single louver section up until it hits the top of the metal retaining channel (1). Pull the bottom side of the louver out away from the fluid cooler and remove the louver (2). Repeat this procedure for other packs to gain necessary access. Proper louver pack replacement is essential to operation. To ensure packs are reinstalled in the correct orientation, it is recommended that one pack is left in its original location inside the fluid cooler as a reminder of pack orientation. Replace packs in the reverse procedure explained for removal. Place packs in the fluid cooler in the order they were removed. Packs should nest tightly with each other, leaving a level surface with no gaps.

XCEL[®] Eliminator Removal–Coil Section:

The coil eliminators are comprised of a series of thermoformed PVC pack assemblies, oriented to strip water from the air prior to leaving the fluid cooler. They are packed tightly to ensure no water escapes.

⚠ Caution

Eliminator edges can be very sharp and could cut skin if proper protection is not used. Always wear gloves and sleeves when handling eliminator packs.



maintenance



To remove the eliminators, place both hands on the eliminator face and push up, this will indicate where one assembly stops and another starts. Push a single section up until it hits the top of the metal retaining channel (1). Push the bottom side of the pack down inside the fluid cooler (2). Turn the pack sideways and remove the eliminator (3). Repeat this procedure for other packs to gain necessary access. Proper eliminator pack replacement is essential to operation. Incorrect installation may result in excessive drift rates and fan inefficiency! To ensure packs are reinstalled in the correct orientation, it is recommended that one pack is left in its original location inside the fluid cooler as a reminder of pack orientation. Place packs in the fluid cooler in the order they were removed. Packs should nest tightly with each other, leaving a level surface with no gaps.

maintenance

Belt Tensioning

⚠ Caution

Any bolts loosened or removed functioning as mechanical or structural hardware should be replaced with the torques specified below. Anti-seize compound is recommended for stainless steel hardware

| Machine Bolt Size | Fastener Torque Values | | | |
|----------------------|------------------------|-----|--------------------|-----|
| | Galvanized | | Stainless | |
| | ft·lb _f | N·m | ft·lb _f | N·m |
| 8mm | 8 | 10 | 15 | 20 |
| 10mm | 15 | 20 | 30 | 40 |
| 12mm | 25 | 35 | 50 | 65 |
| 16mm | 65 | 85 | 120 | 160 |
| 20mm | 125 | 170 | 230 | 315 |

See **Figure 1** for MH Fluid Cooler models **MHF7101 thru MHF7109** with a single motor per fan. Loosen specified hardware located at the top and bottom of the motor support assembly before adjusting the jacking screws. **Do not remove the hardware—it is required to support the motor.** Tighten the hardware after adjustment. Ideal tension is the lowest tension at which the belt will not slip under peak load conditions. Check tension frequently during the first 24-48 hours of run-in operation. Over tensioning shortens belt and bearing life. Keep belts free from foreign material which may cause slipping.

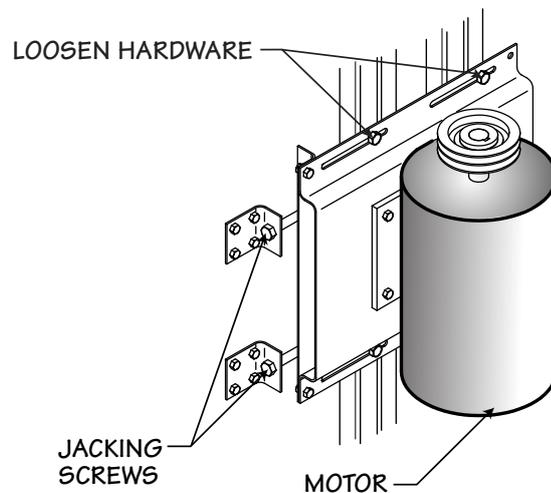


Figure 1

SINGLE MOTOR—SINGLE FAN. MHF7101 THRU MHF7109 ONLY.

maintenance

See **Figure 2** and **Figure 3** for MH Fluid Cooler models **MHF7101 thru MHF7109** for single motor with two fans. The belts are adjusted by turning the two acme bolts clockwise to tension the belts, keeping the motor plate square to the wall. Before tightening or loosening the belts loosen the four motor to motor plate bolts. **Do not remove the hardware.** Next loosen the four motor plate to side gusset bolts. **Do not remove the hardware.** It may help to grease three radial motor slots before turning the adjustment bolts. If one belt is looser than the other, the motor should rotate in the greased slots until the tension is approximately equal. After achieving proper tension tighten the hardware.

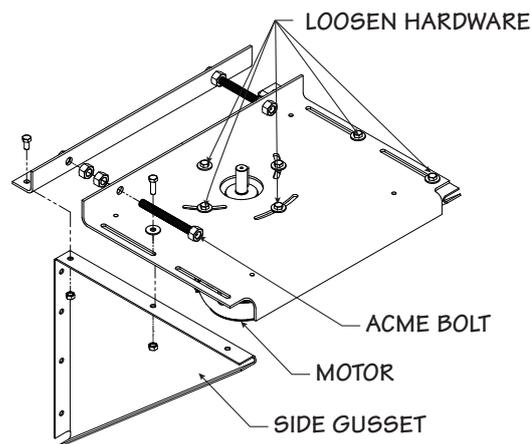


Figure 2

SINGLE MOTOR—TWO FANS. MHF7101 THRU MHF 7109 ONLY.

| Fastener Torque at Motor Only | | | | |
|-------------------------------|--------------------|---------|--------------------|---------|
| Machine Bolt Size | Galvanized | | Stainless | |
| | ft·lb _f | N·m | ft·lb _f | N·m |
| 10mm | 30-32 | 42-43 | 34-36 | 46-48 |
| 12mm | 64-66 | 87-91 | 85-90 | 115-122 |
| 16mm | 135-140 | 183-190 | 125-130 | 169-176 |
| 20mm | 220-230 | 298-312 | 195-205 | 264-278 |

MHF7101 THRU MHF7109 ONLY. NON-LUBRICATED

maintenance

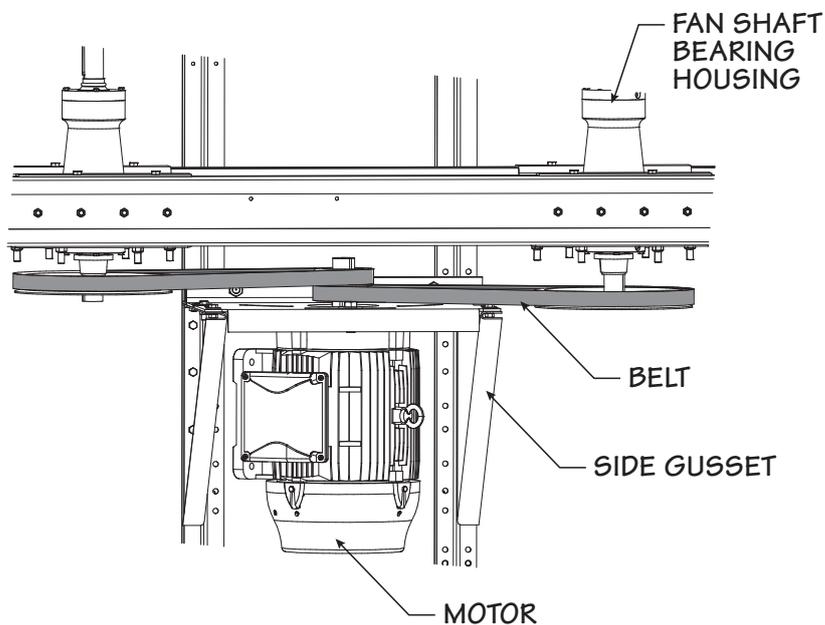


Figure 3

SINGLE MOTOR—TWO FANS. MHF7101 THRU MHF 7109 ONLY.

Ideal tension is the lowest tension at which the belt will not slip under peak load conditions. Check tension frequently during the first 24-48 hours of run-in operation. Over tensioning shortens belt and bearing life. Keep belts free from foreign material which may cause slipping. Never apply belt dressing as this will damage the belt and cause early failure. A Dodge® V-Belt Tension Tester is an alternate method for tensioning V-belts. Check with your local belt supplier.



maintenance

See **Figure 4** for MH Fluid Cooler models **MHF7111** and **MHF7113** with **belt drive** option. The belts are adjusted by turning the threaded rod. Before tightening or loosening the belt, the double nuts holding the motor support in place must be loosened. There are two jam nuts at the end of the rod next to the casing. Turn the nut closest to the end of the rod to tighten the belt. Turn the other nut to loosen the belt. After achieving proper tension tighten the double nuts located on the fan side of the motor support against the motor support to maintain belt tension, then retighten the motor support nuts. Ideal tension is the lowest tension at which the belt will not slip under peak load conditions. Check tension frequently during the first 24-48 hours of run-in operation. Over tensioning shortens belt and bearing life. Keep belts free from foreign material which may cause slipping. Never apply belt dressing as this will damage the belt and cause early failure. A Dodge® V-Belt Tension Tester is an alternate method for tensioning V-belts. Check with your local belt supplier.

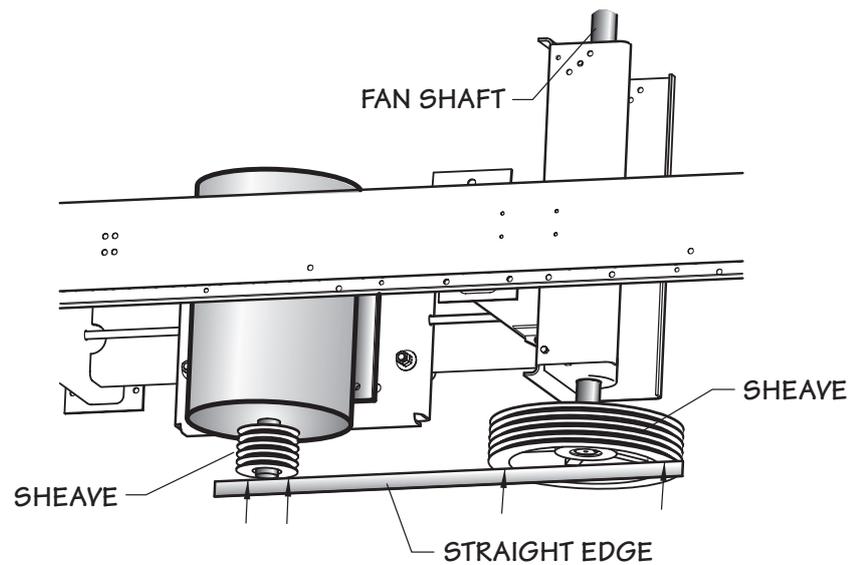


Figure 4

New belts (operating less than 8 hours) should be tensioned to the maximum value. Tension after this period should use no less than the minimum value. If the belt span was measured in millimeters, then use the Newton force values. If specific tensioning instructions are provided with your tensioning tool, those instructions should be used instead.

maintenance

Sheave Alignment

Warning

Always shut off electrical power to the fluid cooler fan motor prior to performing any inspections that may involve physical contact with the mechanical or electrical equipment in or on the fluid cooler. Lock out and tag out any electrical switches to prevent others from turning the power back on. Service personnel must wear proper personal protective clothing and equipment.

- The motor sheave is to be positioned as close as possible to the motor in order to minimize torque on the motor bushings.
- The motor and fan sheaves may have grooves that are not used. The bottom surface of the motor and fan sheaves must be aligned within 3mm of each other and level within $\frac{1}{2}^\circ$ (3mm in 30cm) in order to not adversely affect belt and sheave life.
- Alignment can be achieved by placing a straight edge across the top of the sheaves making sure that it is level and measuring down to the bottom surface of both sheaves at four points.
- The number of grooves on the motor and fan sheaves may not match each other, or the number of grooves on the belt. Always install the belts on the highest grooves on the fan sheave. Doing so will reduce the force on the fan shaft bearings, thus increasing their life.

Belt Tension

| Belt Tension | | |
|-----------------------|---------------------|--------------------|
| Motor Sheave diameter | Used V-Belt minimum | New V-Belt maximum |
| 85 - 110mm | 22N | 32N |
| 112 - 145mm | 32N | 47N |
| 147 - 220mm | 38N | 56N |

maintenance

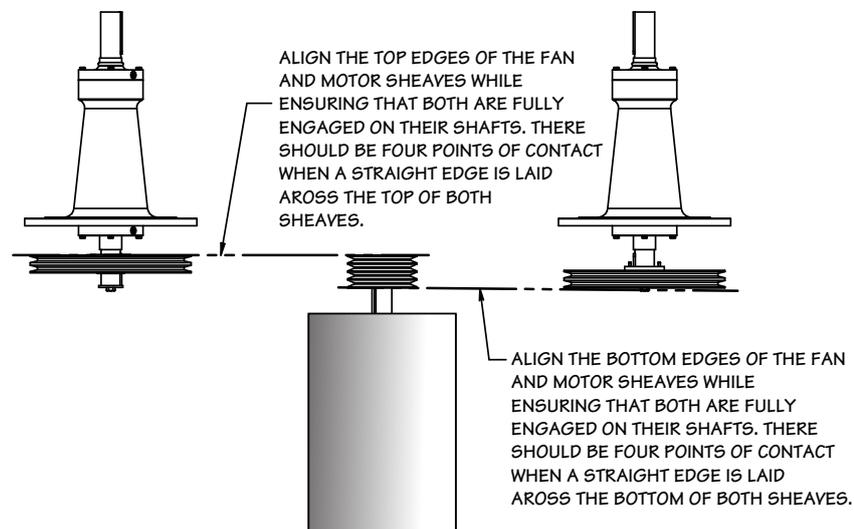


Figure 5

SHEAVE ALIGNMENT—MHF7101 THRU MHF 7109 ONLY.

Bushing Fastener Torque Values

| Bushing | Fastener | Torque N·m |
|---------|----------|------------|
| SH | ¼ - 20 | 8 |
| SDS | ¼ - 20 | 8 |
| SD | ¼ - 20 | 8 |
| SK | ⅝ - 18 | 18 |
| SF | ⅜ - 16 | 30 |
| E | ½ - 13 | 47 |
| F | ⅝ - 12 | 88 |

maintenance

Routine Maintenance

Some maintenance procedures may require maintenance personnel to enter the fluid cooler. Each cased face of the fluid cooler has a door for access to the interior of the fluid cooler.

The optional fan deck ladder—models MHF7111 and MHF7113—is designed and intended solely for personnel to gain access to the fan deck. The fan deck ladder should not be used to enter or exit the access doors located on the cased face of the fluid cooler unless the optional access door platform is provided.

 **Warning**

The purchaser or owner is responsible for providing a safe method for entering or exiting the access door. Use of the fan deck ladder to enter or exit the access doors may result in a fall.

Included with this instruction packet are separate User Manuals on each major operating component of the fluid cooler, and it is recommended that you read them thoroughly. Where discrepancies may exist, the separate User Manuals will take precedence.

The following is recommended as a minimum routine of scheduled maintenance:

 **Warning**

Always shut off electrical power to the fluid cooler fan motor prior to performing any inspections that may involve physical contact with the mechanical or electrical equipment in or on the fluid cooler. Lock out and tag out any electrical switches to prevent others from turning the power back on. Service personnel must wear proper personal protective clothing and equipment.

Weekly Visually inspect the fluid cooler to assess general operating conditions and for signs of microbial growth and appearance of debris, scale and corrosion. Consult a knowledgeable water treatment professional to maintain fluid cooler hygiene.

If equipped, the damper actuator and assembly should be cycled open and closed several times. Observe the cycle to assure that the blades and linkage move freely. Seasonal periods where the damper assembly remains open or closed for months at a time can allow pivot points to scale up, causing premature failure.



maintenance

Monthly (Weekly at start up) Observe, touch, and listen to the fluid cooler. Become accustomed to its normal appearance, sound, and level of vibration. Abnormal aspects relating to the rotating equipment should be considered reason to shut down the fluid cooler until the problem can be located and corrected. Observe operation of the motor, coupling (or drive shaft), Geareducer, (if equipped) and fan. Become familiar with the normal operating temperature of the motor(s), as well as the sight and sound of all components as a whole. If equipped, check Geareducer oil level. Shut down the unit and allow 5 minutes for the oil level to stabilize. Add oil if required. Check for Geareducer oil leaks. Check the Geareducer as well as any optional oil lines to external oil dipstick/sight glass.

Inspect louvers, drift eliminators and basin trash screens and remove any debris or scale which may have accumulated. Replace any damaged or worn out components. Use of high-pressure water may damage the eliminator and louver material.

Observe operation of the float valve. Depress the operating lever to make sure that the valve is operating freely. Inspect the suction screen for plugging. Remove any debris that may have accumulated.

Check for any buildup of silt on the floor of the collection basin. Mentally make note of the amount, if any, so future inspections will enable you to determine the rate at which it is forming.

If equipped with dampers, lubricate the pivot points of the individual blades. Observe the area where the steel pivot pins penetrate the assembly's outer frame. The pin should rotate freely in the frame. In locations with severe hard water supply or climate, apply grease to the pivot points and linkage. This will both lubricate and seal out oxygen and moisture from the pivot points and help prevent hard water scale build-up.

Every 3 months If equipped, lubricate fan shaft bearings. While rotating equipment by hand, grease the bearings until a bead forms around the seals—a maximum charge of 42 ml (MHF7111-MHF7113) is recommended. Chevron SRI-2 grease (or equivalent lithium-based grease) is recommended.

Models MHF7101 - MHF7109 have a grease fitting on each bearing housing with a maximum recommended charge of 15 ml per fitting. Chevron SRI-2 grease (or equivalent lithium-based grease) is recommended.

Semi-Annually If equipped, check the belt tension and condition.

If equipped with dampers, lubricate jack shaft bearings and tie bar linkage with silicone lubricant. If dampers are equipped with pneumatic or electric actuators, the manufacturer's recommended maintenance procedures should be observed. If dampers are exposed to heavy dust-laden air, occasional flushing of the bearings with water is recommended.

maintenance

Note

Geareducer models used on doubleflow MH Fluid Coolers (Models MHF706 and MHF707) are designed for 5-year oil change intervals. To maintain five-year change intervals, use only oil designed specifically for these Geareducers. If, after five years, turbine-type mineral oil is used, the oil must be changed semiannually. Refer to the Geareducer User Manual for oil recommendations and further instructions.

Annually Relubricate motor(s) according to the manufacturer's instructions. See instructions on the next page for fluid coolers with the motor located outside the plenum option. Fan motors with sealed bearings do not require lubrication maintenance.

Note

If the motor has sealed bearings, additional lubrication is not required. Refer to the motor nameplate to determine if grease type and amount are specified.

Check to see that all bolts are tight in the fan and mechanical equipment region, including the fan cylinder and fan guard. Refer to Component User Manuals for torque values.

Inspect the fluid cooler thoroughly, making maximum use of instructions given in the separate User Manuals. Check structural bolted connections and tighten as required. Make preventive maintenance repairs as necessary.

Check to see that all bolts are tight in the fan and mechanical equipment region, including the fan cylinder and fan guard. Refer to Component User Manuals for torque values.

Every 5 Years: If equipped (MHF7111-MHF7113), change Geareducer oil. Refer to the **Geareducer User Manual** for instructions.

maintenance

Motor Lubrication Instructions

Motor located outside plenum option. Doubleflow models MHF7111 and MHF7113 only. Not required for motors with sealed bearings.

⚠ Warning

Open and lock out disconnect switch to make certain motor cannot be started.

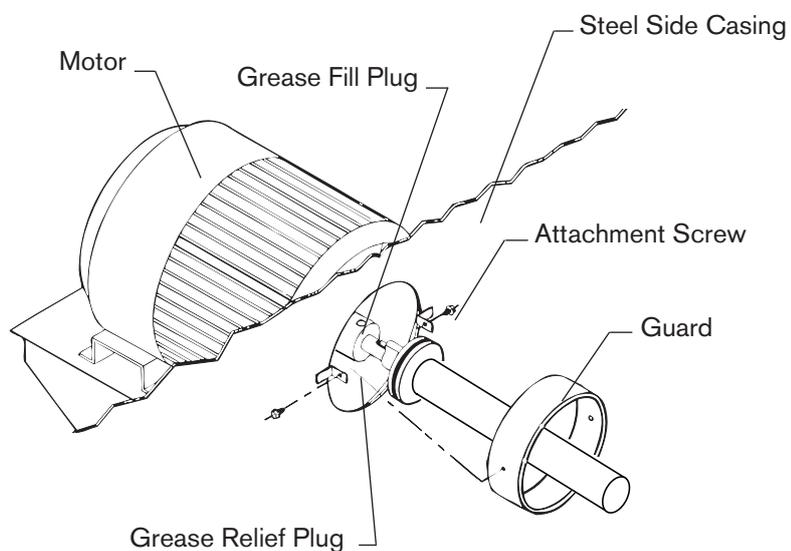


Figure 6

1. Remove guard as shown in Figure 6. Opposite end motor bearing is accessible from outside the fluid cooler.
2. Remove grease fill and relief plugs at both shaft extension end and opposite end bearings and remove hardened grease, using clean wire.
3. Insert grease fittings in grease fill openings and add grease until grease is forced out through relief openings.
4. Replace fill plugs and operate mechanical equipment 30 minutes to one hour to purge excess grease at grease relief opening.
5. Reinstall grease relief plugs and reinstall guard.
6. Resume normal fluid cooler operation.

maintenance

Seasonal Shutdown Instructions

When the system is to be shut down for an extended period of time, it is recommended that the recirculation water system be drained. Leave the basin drains open.

Caution

Draining the coil is not recommended—draining promotes corrosion inside the coil tubes. See protecting coil in Freezing weather on page 19.

During shutdown, follow recommendations in the **Fluid Cooler Inspection and Maintenance** section of this manual before attempting repairs. Eliminators and louvers are easily removed to gain access to the coil. Pay particular attention to mechanical equipment supports and sheaves or coupling (or drive shafts). Following each year's shutdown and cleaning, inspect the fluid cooler's metal surfaces for evidence of the need to apply a protective coating. Do not misinterpret grime as a need to have the fluid cooler painted. If relatively bright metal can be exposed by cleaning, consider that the galvanizing has remained effective. Unless there is evidence of a generalized failure of the galvanizing, localized touch-up should be all that is required.

Note

To the extent that the galvanizing (zinc coating) still exists, paint will not adhere to it readily. Contact the manufacturer of the coating you intend to use for instructions.

Fluid cooler framework Check structural bolted connections and tighten as required.

Fans Check fan assembly bolting and tighten as required. Use torque values prescribed in the "**Fan User Manual**".

Fans shaft bearings If equipped, lubricate fan shaft bearings at close of each operating season—see page 33.

Fan motors Clean and lubricate motor (if required) at close of each operating season (refer to motor manufacturer's recommendations). Does not apply to motors with sealed bearings.

Check motor anchor bolts and tighten as required. See Page 35 for fluid coolers with motor located outside the plenum option.

Caution

Do not start motor before determining that there will be no interference with free rotation of the fan drive.

maintenance

The motor(s) should be operated for three hours at least once a month. This serves to dry out windings and lubricate bearing surfaces. Refer to Marley **“Fan Motor”** User Manual Z0239042 for additional information.

At start of new operating season, make sure bearings are adequately lubricated before returning motor to service. Does not apply to motors with sealed bearings.

Long-Term Storage Procedures

Instructions for protection of non-operating equipment for more than 3 months.

After installation of the Fluid Cooler and completion of the pre-startup instructions, the operational availability of equipment will last for a maximum period of three months. Ensure that the fluid cooler and coil are completely drained of all water and process fluid.

After this initial period of 3 months, until the unit is employed into continuous operation, the fan shaft should be turned by hand for a few minutes every month after: Inject a small amount of grease into ball /roller bearings of fan shaft and drive components as per the manufacturer’s recommendation attached.

General Protective Requirements for Fluid Coolers:

The fan opening at the top of the fluid cooler should be covered with a tarp. This will protect the mechanical components from rain as well as keep out dirt, trash, leaves, etc.

All coils on every fluid cooler model are protected from the environment by the structure of the fluid cooler as well as the PVC air inlet louvers. No external protection of the coil is required for long-term storage. For those units equipped with dampers, the blades of the dampers should be kept in closed position. Damper actuators must be removed and stored in a dry location to prevent condensation buildup inside the actuator.

Internal Protection of Coil:

All of the coil inlet and outlet connections should be sealed off with blind flanges. One flange per coil should be fitted with a valve, pressure gage and blocking plug. The coils should be charged with nitrogen gas to prevent corrosion. Connect a nitrogen supply line to the blind flange with valve. Loosen the bolts at one of the inlet nozzle blind flanges to let air escape. Inject inert gas into coil so as to effect nitrogen flushing for about 10 minutes and thus

maintenance

to expel all air out of the unit. Finally, re-tighten the inlet nozzle blind flange bolts and let nitrogen pressure build up to 48 kPa inside the tube-bundle. Disconnect the nitrogen line and plug the isolation valve to avoid any pressure drop in case of valve leak.

Mechanical Components:

Electric motors All drive motors should be taken down and stored indoors. Then, every month, turn motor shafts to evenly distribute lubricant to the bearing parts.

Recirculation pumps All pumps and pump motors should be taken down and stored indoors (pumps and motors may be stored fully assembled). Then, every month, turn pump impeller shaft to evenly distribute lubricant to the bearing parts.

Belts Properly stored belts will retain their properties unchanged for several years. Under unfavorable storage conditions and with improper handling, deterioration of their physical properties will result. These changes can be caused, for example, oxidation, ozone, extreme temperatures, light, damp or solvents. It should be ensured that belts are stored stress free, which is to say without tension, pressure or other causes of deformation, as strain causes permanent deformation and failure due to fatigue, as well as cracking. If, for reasons of space, they are stored suspended, the diameter of the bar from which they are suspended must be equal to at least 10 times the height of the belt.

Note

The belts may not be stored for longer than 3 month in an open, uncontrolled environment.

Storage Area The storage area must be dry and dust-free. Belts may not be kept together with chemicals, solvents, fuels, lubricants, acids, etc.

Temperature Belts should be shielded from Radiators and their pipes. The distance between radiators and stored equipment must be at least 10 feet.

Light Belts should be protected from light, particularly from direct sunlight and strong artificial light with high ultraviolet content (formation of ozone), such as for example fluorescent tubes installed in open fixtures. Ideally, room lighting should be normal incandescent bulbs.

Ozone To counteract the damaging effect of ozone, the storage areas may not contain any form of ozone generating equipment, such as for example fluorescent light sources, mercury vapor lamps or electrical high voltage devices. Combustion gases and vapors, which may lead to ozone formation due to chemical processes, must be avoided or removed. 

maintenance

Dampness Damp storage areas are quite unsuitable. It should be ensured that no condensation occurs. The relative humidity should be below 65 %.

Cleaning Cleaning of dirty belts can be carried out with a mixture of glycerin and spirit in a ratio of 1:10.

Caution

Benzene, benzol, turpentine and similar substances may not be used. Furthermore, sharpened objects, wire brushes, emery paper etc., may not be used, as they will cause mechanical damage to the belts.

Bearings Every month, turn the fan shaft and rotate by hand to distribute grease evenly over the bearing parts. Then, every three months, inject grease to prevent any blocking of the lubrication lines possibly due to grease hardening. Whenever the fan shaft has been turned, it is a must to secure them at a standstill.

Fans: See **Fan User Manual** for instructions.

SPX Cooling Technologies Services

Our interest in your MH Fluid Cooler does not end with the sale. Having conceived, designed, and manufactured the most reliable and longest-lasting fluid cooler of its class, we want to make sure that you gain the maximum possible benefit from its purchase.

Therefore, the following services are available which are intended to: assure the maximum possible service life under your operating conditions; tailor the operating characteristics to your specific needs—and maintain consistently optimum thermal performance capability. They are available by contacting your Marley sales representative.

Replacement parts A complete stock of parts and components is maintained at one or more of the various Marley plants. In cases of emergency, they can normally be shipped within 24 hours—by air freight if necessary. However, you would obviously benefit from anticipating your need in advance, thus avoiding the cost of special handling.

Be sure to mention your fluid cooler serial number (from the fluid cooler nameplate) when ordering parts.

Periodic maintenance You may wish to contract with SPX Cooling for regularly scheduled visits—for the purpose of inspecting and reporting your fluid cooler's condition—to make recommendations intended to prevent emergencies— and to perform maintenance considered outside the norm.

maintenance

This service is not intended to replace the important function performed by your maintenance staff. Their attention assures the fluid coolers's routine operating performance, and is invaluable. However, we recognize that the unusual manner in which a fluid cooler performs its function—as well as the unique forces which act upon it—may be considerations which occasionally require the services of an expert technician.

Additional Information

Increased load requirements MH Fluid Coolers are designed so that cells of either equal or unequal capacity can be added in the future. This allows you to compensate for the load increases that normally occur with the replacement or addition of production equipment—and still retain continuity with respect to your fluid cooler system.

Fluid cooler rebuilding SPX routinely rebuilds and upgrades fluid coolers and cooling towers of all materials and manufacture. If your product ever reaches the limit of its service life, we recommend that you investigate the cost of rebuilding before you routinely order a new replacement fluid cooler.

Each MH Fluid Cooler includes a document package containing general orientation drawings, and fluid cooler component manuals. These documents contain important information relating to safe installation and operation of the fluid cooler. Field installation is required for fan guards (doubleflow models), piping inlets and piping outlets. Some optional accessories, such as handrails, ladders and safety cages may also require field installation. A separate installation drawing or manual for each purchased option is included in the document package along with bills of material. If you have purchased an option and can't find the appropriate installation drawing, contact your local Marley sales representative before proceeding.

In addition to these specific documents, numerous technical reports are published by SPX including more detailed information on a variety of cooling tower and fluid cooler operation and service topics. Your Marley sales representative will be happy to give you copies of these reports at no charge or you can download copies from our website at spxcooling.com.

For complete parts and service assistance, contact the Marley sales representative in your area. If you need help locating your representative, please phone 44 1905 750 270 or check the internet at spxcooling.com.

troubleshooting

| Trouble | Cause | Remedy |
|---|--|--|
| Motor will not start | Power not available at motor terminals | Check power at starter. Correct any bad connections between the control apparatus and the motor. Check starter contacts and control circuit. Reset overloads, close contacts, reset tripped switches or replace failed control switches. If power is not on all leads at starter, make sure overload and short circuit devices are in proper condition |
| | Wrong connections | Check motor and control connections against wiring diagrams. |
| | Low voltage | Check nameplate voltage against power supply. Check voltage at motor terminals. |
| | Open circuit in motor winding | Check stator windings for open circuits. |
| | Motor or fan drive stuck | Disconnect motor from load and check motor and fan drive for cause of problem. |
| | Rotor defective | Look for broken bars or rings. |
| Unusual motor noise | Motor running single-phase | Check motor and attempt to start it. Motor will not start if single-phased. Check wiring, controls and motor. |
| | Motor leads connected incorrectly | Check motor connections against wiring diagram on motor. |
| | Bad bearings | Check lubrication. Replace bad bearings. |
| | Electrical unbalance | Check voltages and currents of all three lines. Correct if required. |
| | Air gap not uniform | Check and correct bracket fits or bearing. |
| | Rotor unbalance | Rebalance |
| Motor runs hot | Cooling fan hitting end belt guard | Reinstall or replace fan. |
| | Wrong voltage or unbalanced voltage | Check voltage and current of all three lines against nameplate values. |
| | Overload | Check fan blade pitch. See "Fan User Manual." Check for drag in fan drivetrain as from damaged bearings. |
| | Wrong motor RPM | Check nameplate against power supply. Check RPM of motor and drive ratio. |
| | Bearing overgreased | Remove bearing reliefs. Run motor up to speed to purge excessive grease. Does not apply to motors with sealed bearings. |
| | Wrong lubricant in bearings | Change to proper lubricant. See motor manufacturer's instructions. |
| | One phase open | Stop motor and attempt to start it. Motor will not start if single-phased. Check wiring, controls and motor. |
| | Poor ventilation | Clean motor and check ventilation openings. Allow ample ventilation around motor. |
| | Winding fault | Check with ohmmeter. |
| | Bent motor shaft | Straighten or replace shaft. |
| | Insufficient grease | Remove plugs and regrease bearings. Does not apply to motors with sealed bearings. |
| | Too frequent starting or speed changes | Limit cumulative accelerations time to a total of 30 seconds/hour. Set on/off or speed change set points farther apart. Consider installing a Marley VFD drive for fine temperature control. |
| Deterioration of grease or foreign material in grease | Flush bearings and relubricate. Does not apply to motors with sealed bearings. | |
| Bearings damaged | Replace bearings. | |

troubleshooting

| Trouble | Cause | Remedy |
|--|---|--|
| Motor does not come up to speed | Voltage too low at motor terminals because of line drop | Check transformer and setting of taps. Use higher voltage on transformer terminals or reduce loads. Increase wire size or reduce inertia. |
| | Broken rotor bars | Look for cracks near the rings. A new rotor may be required. Have motor service person check motor. |
| Wrong motor rotation | Wrong sequence of phases | Switch any two of the three motor leads. |
| Geareducer noise. (If equipped). | Geareducer bearings | If new, see if noise disappears after one week of operation. Drain flush, and refill Geareducer oil. See "Geareducer User Manual." If still noisy, replace. |
| | Gears | Correct tooth engagement. Replace badly worn gears. Replace gears with broken or damaged teeth. |
| Unusual fan drive vibration | Loose bolts and cap screws | Tighten all bolts and cap screws on all mechanical equipment and supports. |
| | Unbalanced drive shaft or worn couplings. (If equipped) | Make sure motor and Geareducer shafts are in proper alignment and "match marks" properly matched. Repair or replace worn couplings. Rebalance drive shaft by adding or removing weights from balancing cap screws. See "Driveshaft User Manual." |
| | Fan | Make certain all blades are as far from center of fan as safety devices permit. All blades must be pitched the same. See "Fan User Manual." Clean off deposit build-up on blades |
| | Worn Geareducer bearings. (If equipped) | Check fan and pinion shaft endplay. Replace bearings as necessary. |
| | Worn fan shaft bearings. (Belt drive). | Check fan shaft endplay. Replace bearings as necessary. |
| | Unbalanced motor | Disconnect load and operate motor. If motor still vibrates, rebalance rotor. |
| | Bent Geareducer shaft. (If equipped). | Check fan and pinion shaft with dial indicator. Replace if necessary. |
| Fan noise | Blade rubbing inside of fan cylinder | Adjust cylinder to provide blade tip clearance |
| | Loose bolts in blade clamps | Check and tighten if necessary. |
| | Fan shaft bearing. (Belt drive). | Grease bearings. |
| Scale or foreign substance in circulating water system | Insufficient blowdown | See "Water Treatment" section of this manual. |
| | Water treatment deficiency | Consult competent water treating specialist. See "Water Treatment" section of this manual |
| Cold water temperature too warm. | Entering wet bulb temperature is above design | Check to see if local heat sources are affecting fluid cooler. See if surrounding structures are causing recirculation of fluid cooler discharge air. Discuss remedy with Marley representative. |
| | Design wet bulb temperature was too low. | May have to increase fluid cooler size. Discuss remedy with Marley representative |
| | Actual process load greater than design | May have to increase fluid cooler size. Discuss remedy with Marley representative |
| See "Fluid cooler Operation." | Overpumping | Reduce water flow rate over fluid cooler to design conditions. |
| Excessive drift exiting fluid cooler | Fluid cooler starved for air | Check motor current and voltage to be sure of correct contract horsepower. Repitch fan blades if necessary. Clean louvers, fill and eliminators. Check to see if nearby structures or enclosing walls are obstructing normal airflow to fluid cooler. Discuss remedy with Marley representative. |
| | Distribution basins overflowing | Reduce water flow rate over fluid cooler to design conditions. Be sure distribution water basin nozzles are in place and not plugged. |
| | Faulty drift elimination | Check to see that integral fill. Louvers and eliminators are clean, free of debris and installed correctly. If drift eliminators are separate from fill, make sure they are correctly installed and in place. Clean if necessary. Replace damaged or worn out components |

maintenance schedule

| Maintenance Service | Monthly | Semi-annually | Seasonal Startup or Annually |
|--|-----------------|-----------------|------------------------------|
| Inspect General Condition and Operation | x | | x |
| Observe Operation of: | | | |
| Mechanical—motor, fan and drive mechanism | x | | x |
| Makeup valve (if equipped) | x | | x |
| Inspect for unusual noise or vibration | x | | x |
| Inspect and Clean: | | | |
| Air inlet | x | | x |
| PVC drift eliminators | x | | x |
| Distribution basin, nozzles and collection basin | x | | x |
| Fan and pump motor exterior | x | | x |
| Coil surface | | x | |
| Check: | | | |
| Collection water basin level | x | | x |
| Blowdown—adjust as required | x | | x |
| Geareducer Drive (if equipped): | | | |
| Check for loose fasteners including oil drain plug | | | x |
| Check oil level, check for / repair oil leaks | x | | x |
| Change oil | | R | |
| Make sure vent is open | | x | x |
| Check driveshaft or coupling alignment | | | x |
| Check for loose driveshaft or coupling fasteners | | | x |
| Check driveshaft or coupling bushings or flex element for unusual wear | | x | x |
| Lube lines (if equipped): | | | |
| Check for oil leaks in hoses or fittings | x | R | x |
| Belt drive (if equipped): | | | |
| Fan shaft bearing lubrication (every 3 mo.) | | every 3 months | every 3 months |
| Check and tighten support fasteners | | | x |
| Check shaft, sheave and belt alignment | | | x |
| Check belt tension and condition | | x | x |
| Check sheave bushing fastener torque | | | x |
| Fan: | | | |
| Check and tighten blade and hub fasteners | | | x |
| Check fan blade pitch and tip clearance | | | x |
| Check fan cylinder for loose fasteners | | | x |
| Motor: | | | |
| Lubricate (as required) | | | R |
| Check mounting bolts for tightness | | | x |
| Operate at least | 3 hours a month | 3 hours a month | 3 hours a month |
| Basin Heater (if equipped): | | | |
| Check for proper operation of temp/low water level sensor | | | x |
| Inspect/clean buildup of contaminant from sensor | | x | x |
| Structure: | | | |
| Inspect/tighten all fasteners | | x | x |
| Inspect and touch up all metal surfaces | | | x |

R – Refer to Component User Manual

Note: It is recommended at least weekly, that the general operation and condition be observed. Pay attention to any changes in sound or vibration that may signify a need for closer inspection.

MH fluid cooler

USER MANUAL

SPX COOLING TECHNOLOGIES UK LTD

3 KNIGHTSBRIDGE PARK, WAINWRIGHT ROAD
WORCESTER WR4 9FA UK

44 1905 750 270 | ct.fap.emea@spx.com
spxcooling.com

uk_Z0920512_E | ISSUED 04/2019

©2015-2019 SPX COOLING TECHNOLOGIES, INC. ALL RIGHTS RESERVED

In the interest of technological progress, all products are subject to design
and/or material change without notice.

