

PL-4600D (60 CY, MOTORS)

## **4600 SERIES AQUATOWER PARTS LIST**

Models 4613, 4615, 4617, 4619, 4621, 4623, 4625, 4627, 4629, 4631 & 4633 (SEE ITEMIZED PARTS LIST ON REVERSE SIDE)

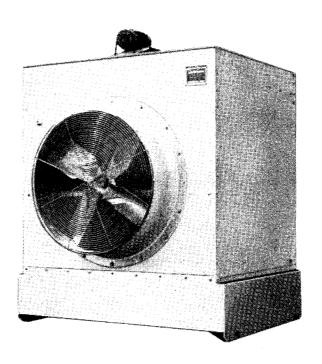

Models 4613 through 4633

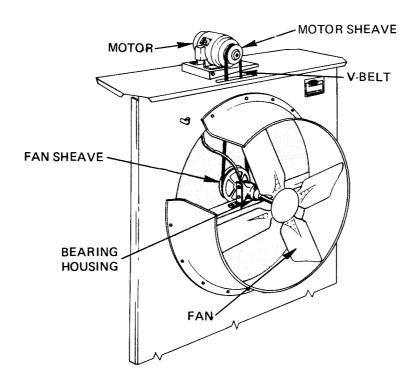

Mechanical Equipment

## **AQUATOWER PARTS LIST\*\*\***

				MODEL QUANTITIES										
REF.	DESCRIPTION OF PARTS			13	15	2	19	21	R	32	2	2	==	E
				4613	4615	4617	4619	4621	4623	4625	4627	4629	4631	4633
1	MOTOR*			1	<del>                                     </del>		<del>                                     </del>	<del>                                     </del>	$\vdash$	╁	$\vdash$	╁─╴	<del> </del>	
	1/3 H.P., 1750 RPM, TENV.			1	1	1				<b>†</b>	1	<del>                                     </del>		_
	1/2 H.P., 1750 RPM, TEFC.						1	1			1			
l I	3/4 H.P., 1750 RPM, TEFC.								1					
[	1 H.P., 1750 RPM, PROT.									1	1			
1 1	1-1/2 H.P., 1750 RPM, PROT.				<u> </u>					<u> </u>		1		
	2 H.P., 1750 RPM, PROT.			↓	<b>_</b>	<u> </u>			ļ	L			1	
	3 H.P., 1750 RPM, PROT.			├	<del> </del>		<del> </del>	-					_	1
2	MOTOR SHEAVE		KEYWAY	╁	<del> </del>			<del> </del>			-			
2	Browning, AK 49	5/8" Bore	3/16 x 3/32	<del>                                     </del>	<del> </del>				1	-	├			
	Browning, AK 51	5/8" Bore	3/16 x 3/32	<del>                                     </del>			1		<del> </del>	<del>                                     </del>	<b></b> -			
	Browning, AK 54	5/8" Bore	3/16 x 3/32	$T^{-}$	1									
	Browning, AK 59	5/8" Bore	3/16 x 3/32	1		1								
	Browning, AK 46	5/8" Bore	3/16 × 3/32	1				1						
	Browning, AK 51	7/8" Bore	3/16 x 3/32	1						1				
	Browning, ITB 50 with "PI" Bushing	7/8" Bore	3/16 x 3/32								1			
	Browning, ITA 46 with "PI" Bushing	7/8" Bore	3/16 x 3/32									1		
	Browning, AK 56	7/8" Bore	3/16 x 3/32										1	
1 1	Browning, ITB 52 with "PI" Bushing	1-1/8" Bore	1/4 x 1/8											1
$\vdash$														
3	FAN SHEAVE	Olan Davis	2/4.0 2/20	-										
	Browning, AK 99	3/4" Bore 3/4" Bore	3/16 x 3/32 3/16 x 3/32	1	1		_1			_				
	Browning, AK 134	3/4" Bore 3/4" Bore	3/16 x 3/32 3/16 x 3/32	-		1			1	_1		1	$\dashv$	
	Browning, AK 144 Browning, AK 154	3/4" Bore	3/16 x 3/32	-	$\vdash$			-						
	Browning, AK 184	3/4" Bore	3/16 x 3/32		$\vdash$	-							1	
	Browning, BK 190	3/4" Bore	3/16 x 3/32								1	$\dashv$		
	Browning, BK 160	3/4" Bore	3/16 x 3/32					_			-			1
l t														
4	V-BELT													
	Browning, A 68			1										
	Browning, A 87				1									
	Browning, B 133			$\sqcup$				_			1			
	Browning, A 110			_		1	1			1				
	Browning, A 112							1	1				-	
	Browning, A 128			$\vdash$	-+		$\dashv$					-	1	1
	Browning, A 120 Browning, B 124			$\vdash$				-+	$\dashv$			-1		
l t	Biowillig, B 124		<del></del>		$\neg$		$\overline{}$			$\dashv$	$\dashv$	$\dashv$	$\dashv$	
5	FAN** TORRINGTON												_	
	24" Dia., N2424-4	3/4" Bore	3/16 x 3/32	1						一十			$\neg \uparrow$	
	24" Dia., N2436-4	3/4" Bore	3/16 x 3/32		1	1	1							
	36" Dia., R3627-4 with "H" Bushing	3/4" Bore	3/16 x 3/32					1	1	1				
	42" Dia., R4227-4 with "H" Bushing	3/4" Bore	3/16 x 3/32				$\Box$				1	1	$\Box I$	
	48" Dia., R4827-4 with "H" Bushing	3/4" Bore	3/16 x 3/32		$\dashv$					_			1	1
6	DE A DINIC HOLICING			-								$\dashv$	$\dashv$	
0	BEARING HOUSING Including shaft and bearings	6 2404 2		1	1	1	1	1	1	1	+	<del>-, </del>	<del>,  </del>	<del>-</del>
<del> </del>	Bearings only (2 required)	6-3494-2 52-155			+		<del>'</del> +		<del>'  </del>	- <del>'  </del>	<del>-                                    </del>	-1	1	-1-
	Oil seals only (2 required)	SS-5166		-			-+	-+	-+	$\dashv$		$\dashv$		
t	On some Only (2 required)	30-3100			$\dashv$	$\dashv$			$\dashv$	$\dashv$	$\dashv$	$\dashv$	$\dashv$	$\dashv$
7	FLOAT VALVE ASSEMBLY			_		$\neg \uparrow$	$\dashv$	_	$\neg \dagger$	_	$\dashv$	$\neg \dagger$	_	
	3/4" Flippen with ball and rod	<del></del>		1	1	1	1	1	1	1	1	1	1	1
l t														

<sup>\*1/3</sup> H.P. Motor Available in Single Phase Only.

When Ordering Replacement Motor, Specify Voltage and Phase Required.

4613 - 601 4615 - 631

4629 - 526 4631 - 406

4623 - 426 4617 - 697 4625 - 506

4633 - 1155

4619 - 871 4627 - 526

<sup>1/2</sup> H.P., 3/4 H.P. and 1 H.P. Motors Available in Single Phase or 3 Phase.

<sup>1-1/2</sup> H.P., 2 H.P., and 3 H.P. Motors Available in 3 Phase Only.

<sup>\*\*24&</sup>quot; Dia, Fans Have Hub on Inlet Side, All Other Fans Have Hub on Exhaust Side,

<sup>\*\*\*</sup>This Parts List Effective for the 4600 Aquatowers Starting with the Following Serial Numbers: 4621 - 491